



# m8

# User Guide

12 December 2007

Introduction.....	2
<b>m8</b> Input Panel .....	2
Top area,.....	2
Key Area, .....	2
Symbol mode, .....	3
Emoticons mode,.....	3
English mode,.....	4
Numeric mode,.....	6
Backspace buttons,.....	6
How to start .....	6
How to add English words that didn't presented in M8 input.....	6
How to register this software "M8 input" .....	7
中文輸入.....	9



 
## Introduction

While a mobile user is traveling on the road, it would be impossible for him to operate the mobile device with both hands. Which means a typical pocket pc keyboard which requires both hands to operate would be very inconvenient for user to use.

Imagine, when you are walking on the street, and want to sent a SMS, but you are holding a briefcase. Is it possible to draw the stylus and tap on the Pocket PC software keyboard?

**m8** input is therefore designed to improve the problem. Now with **m8** input, users would be able to type English and Chinese words with single hand. This overcomes the limitation of pocket PC keyboard which is not easy to operate with single hand. With **m8** input, predicted English words and related Chinese words would be shown on the screen for user to choose. This shortens the inputting time and therefore increases the efficiency for typing.

## m8 Input Panel

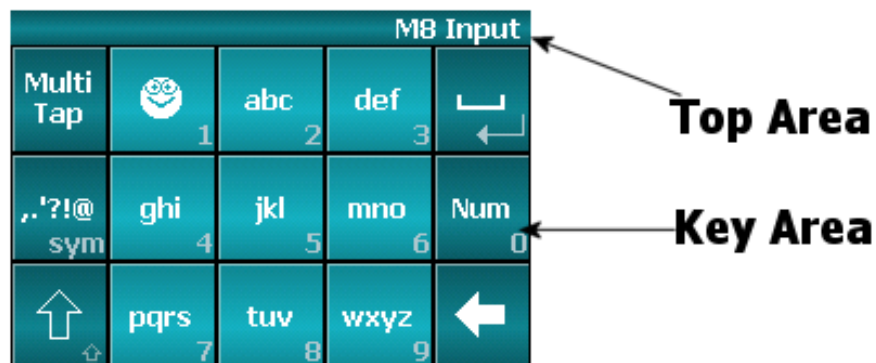

### Top area,


1. Show current input mode when user haven't input anything.
2. Show inputted keystrokes, when user is inputting Chinese.
3. Show word list, when user is inputting:
  - 1) English with "M8 Input" mode
  - 2) Chinese with keystrokes hiding mode.

### Key Area,



1. There are two modes for all buttons. They are "Single Tap" & "Tap-and-Hold". There would be different result for single tap and tap-and-hold.
2. The feature of Single Tap of the buttons is shown at the center of the buttons. For



example, Single Tap of “” is Emoticons as shown.

3. The features of Tap-and-Hold of the buttons is shown at the bottom right hand corner of the buttons. For example, Tap-and-Hold of “” is digit “1” as shown.


## Symbol mode,

1. To enter symbol mode, **tap-and-hold** “”.
2. There are two pages of symbol, **tap** “” to switch to another page.
3. To select a symbol, **tap** the buttons. After choosing an appropriate symbol, **m8** will go back to the text inputting mode automatically. If you would like to choose another symbol, please enter the symbol mode again.

Multi-Tap					Multi-Tap				
(	:	;	#	_	[	¢	£	^	"
)	\$	%	/	»»	]	<	>	~	»»
=	&	* En	-	+		{	} En	`	\

4. To return to the text inputting mode without choosing a symbol, **tap-and-hold** any button.

## Emoticons mode,

1. To enter emoticons mode, **tap** “”.
2. There is one page of emoticons.
3. To select an emoticon, **tap** the buttons. After choosing an appropriate emoticon, **m8** will go back to the text inputting mode automatically. If you would like to choose another emoticon, please enter the emoticons mode again.




4. To return to the text inputting mode without choosing an emoticon, **tap-and-hold** any button.

## English mode,

1. English mode is the default mode of **m8** Input (predicted English words).
2. There are two inputting method, they are “Multi-tap” and “**m8** Input”.
3. To switch the inputting method, **tap** the “Multi-tap”/”**m8** Input” buttons on the top left hand corner of the key area.
4. For Multi-tap mode, user can select English characters by single tap.
5. For **m8** Input mode, user can select predictive words on the top area.
6. Use d-pad left/right and action key to select top area words.

## Multi-tap Mode

For Multi-tap mode, user can select English characters by single tap.

 
 
1. To enter a letter, **tap** the button on which the letter appears.
2. To enter the first letter on the button, **tap** once. To enter the second letter on the button, **tap** twice quickly, and so on. For example, if you would like to enter “a”, **tap** “” once. If you would like to enter “b”, **tap** this button twice quickly.
3. The letters belong to the same buttons will be shown on the top area until you have finished choosing the letter you want. So you must wait until the letter has been sent to an editable field before entering the next letter on the same button. For example, to enter the word “cat”, **tap** “222”, pause, **tap** “2”, pause and then **tap** “8”.
4. This pause is called the “delay before first repeat”. You can adjust the length of the pause between keypresses by the following method:

To change the delay before first repeat setting:

1. Select Settings from the Start menu.
2. Select Buttons.



3. Select Up/Down Control at the bottom.
4. In the delay before first repeat field, select the length of the pause between key presses that you prefer.

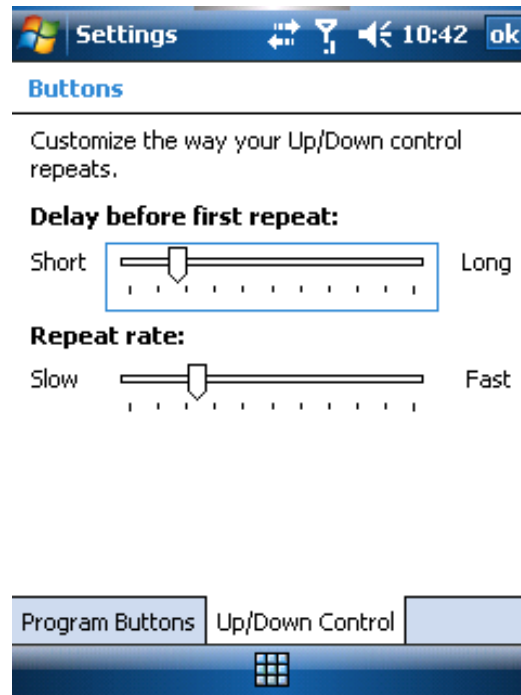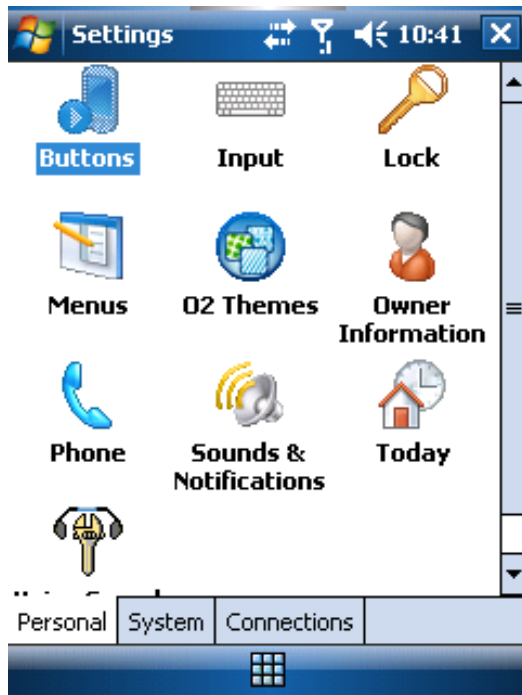

## m8 Input Mode

For **m8** Input mode, user can select predictive words on the top area

1. To enter a letter, simply **tap** the buttons that contain the letter that you like once only.
2. **m8** will analyze your key presses automatically and attempt to complete the word. For example, to enter the word "shoe", simple **tap** "7", "4", "6", and "3". The word "shoe" and other matched words will be shown on the top area.
3. To choose among the words shown, simply **tap** the word on the top area.

 
NOTE: **m8** cannot always find the word you want in the internal dictionary. The words "no such words" would be shown on the top area. In these cases,

- 1) Select option of the input method at the bottom part of the screen.
- 2) An "Input" window will be displayed on the screen.
- 3) Tap the "options" button
- 4) Enter the word you have just entered but cannot be found in the internal dictionary in the "user dictionary" page with "Multi-tap" mode.
- 5) Tap "add", the word will be added to the internal dictionary automatically.



## Numeric mode,

Numeric				
*	1	2	3	#
.,'?!@ sym	4	5	6	En
0	7	8	9	←

1. To enter numeric mode, tap .
2. Input digits, “\*” and “#” by single tap.

## Backspace buttons,

There are two modes of Backspace buttons, “Tap” and “Tap-and-Hold”

**Tap** Backspace button can,

1. delete one previous keystroke, while there are input keystrokes on **m8**
2. delete one previous characters or letter on the edit area, while there are no input keystrokes on **m8**

**Tap-and-hold** backspace button,

1. Clear all Input keystrokes, while there are input keystrokes on **m8**
2. Repeat delete one previous characters on the editable field, while there are no input keystrokes on **m8**.

## How to start

To Start **m8** Input,

1. Select the software input method at the bottom of the screen.
2. Choose “**m8**” among the options.



 
## How to add English words that didn't presented in M8 input

Sometimes, you may need to input words that do not exist in the internal dictionary.

1. When **m8** is the current Input method, user can select “Option” from the bottom of the screen.




2. In the "Input" Settings, select "m8" and click "Option" to enter the user dictionary window and add the appropriate words.

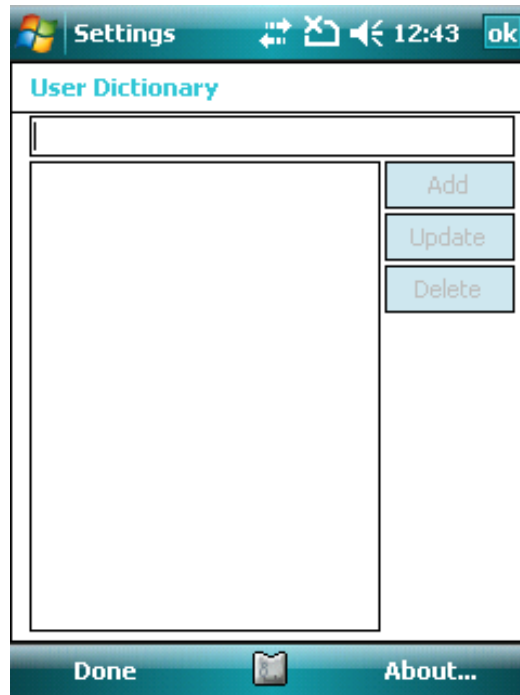

## How to register this software "M8 input"

 
1. In the "Input" Settings, select "m8" and click "Option" to enter the user dictionary window and add the appropriate words.
2. In the user dictionary window press the "About..." soft key to show the about dialog.

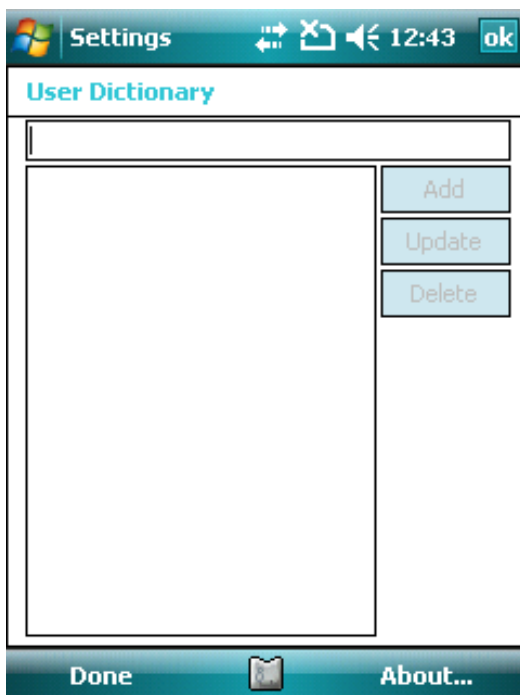

# J & M Soft



 3. In about dialog, it will show your software is registered or still in trial period.
4. In about dialog, press “Register” soft key to show the registration dialog.

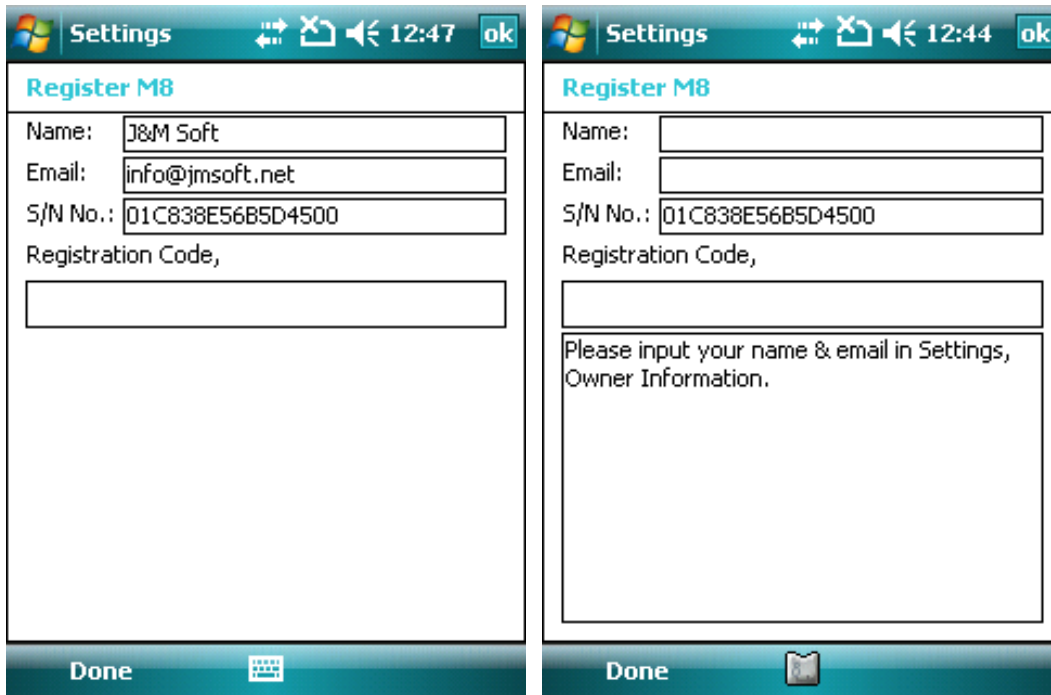







  5. Note, User Name and email are input from “Owner Information” Settings.
6. In registration dialog, input your registration code from Handango.



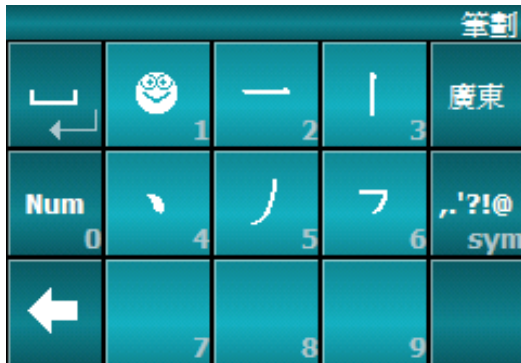


## 中文輸入



1. 要進入中文輸入，按一下“”。
2. 中文輸入共有五種輸入法，分別是倉頡、速成、廣東拼音、北京拼音及筆劃輸入。要切換中文輸入法，按一下輸入法名稱的按鍵，如“”。
3. 要選擇上方部分選擇區(top area)的中文字，請使用左/右方向鍵
4. 要將輸入的中文字顯示在數字鍵中(key area)，請按“”，用戶可以直接按下中文字選取，或按“”或“”轉到下一頁選取中文字。



5. 以下為筆劃輸入法之對照表：

數字鍵	筆劃類型	基本筆劃	筆劃名稱
	一	一	橫
		㇇	提
	丨	丨	豎
		㇇	豎鉤
	丶	丶	點
		㇇	捺
	丿	丿	長撇
		㇇	直撇
	㇇	乙 ㇇ ㇇	曲, 折
		㇇ ㇇ ㇇	彎, 鉤